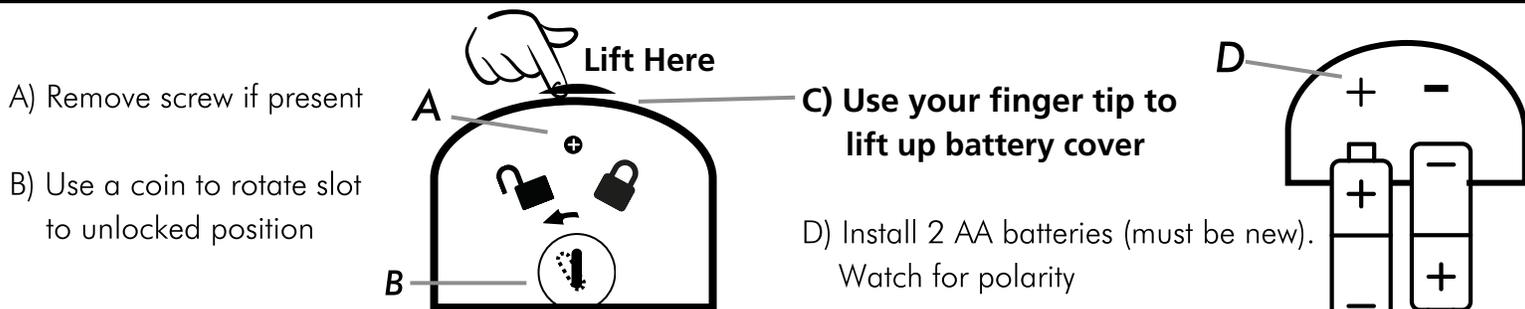


**Battery Installation**



Ensure the batteries are installed correctly. A light to the left of the power button will flash any time a button is pressed. If it does not, reinstall the batteries correctly or check the condition of the batteries.

*Note: The optional screw for the battery compartment is not required, but will help reduce battery loss. (Screw is taped inside blue box)*

**The Remote is now ready to operate any LG, Samsung, RCA or Philips Commercial TV**

**Important: If you have a guest/patient in room entertainment system or GRE System you will need to program your remote as follows:**

The Clean Remote SCR10 is compatible with many guest/patient in room entertainment systems (GRE) including those which offer streaming or casting functionality.

To select your system, PRESS and HOLD both  and  until the light to the left of the POWER button lights up solid, then enter the corresponding three digit code. The light on the remote turns off to confirm the code is stored. If the light flashes repeatedly repeat the process above to add the code.

<b>Enseo®</b>	<b>004</b>
<b>World Cinema®</b>	<b>005</b>
<b>WorldVue®</b>	<b>005</b>
<b>Bonvoy®</b>	<b>006</b>
<b>AEP® Box</b>	<b>013</b>

 
 
<b>GuestTek®</b>	<b>007 or 008</b>
<b>Sonifi®</b>	<b>010, 011 or 012</b>
 <p><b>If all of your system's functions are not working properly, please try the next code for your system.</b></p>	

**Note these systems must be connected to an LG, Samsung, RCA or Philips TV.  
SCR10 Remotes are not compatible with residential TVs**

**See back page for learning feature, tips and reset instructions**

## Learning Function

The learning feature allows you to add or teach a command from your original remote to your Clean Remote SCR10. **You can use this feature to REPLACE the function of any button on the Clean Remote SCR10.**

- 1) On the Clean Remote SCR10 PRESS and HOLD both the  and  until the light to the left of the POWER button lights up solid.
- 2) Point both remotes at each other   and select the Clean Remote SCR10 button you wish to teach the new function to by PRESSING it one time.
- 3) PRESS the button on the original remote you want the Clean Remote SCR10 to learn, one time. The light to the left of the POWER button on the Clean Remote SCR10 will flash to confirm the process is complete.

Simply repeat these steps to learn other button commands.

## Factory Reset

To restore the Clean Remote SCR10 to its original factory settings.

PRESS and HOLD both the  and  until the light to the left of the POWER button flashes 3 times.

The remote is now reset, it will now operate LG, Samsung, \*RCA and \*Philips TVs.

## Philips TV Tips

Visit our website's FAQ section for tips, including how to select your Power On setting and more. (For example the TV's home screen or a TV channel)

**Important: This remote is not compatible with cable company set-top boxes. Visit our website for cable set-top box capable models.**

[www.cleanremote.com](http://www.cleanremote.com)